

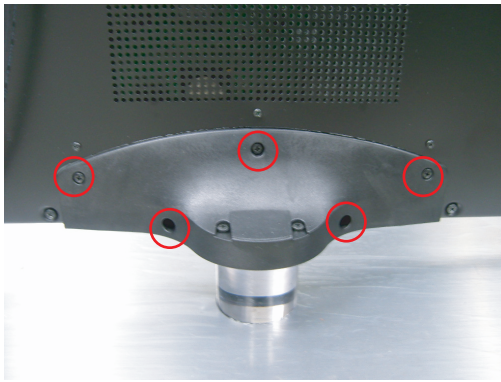
3. Disassembly and Reassembly

This section of the service manual describes the disassembly and reassembly procedures for the UN46B8000XF LCD TV.

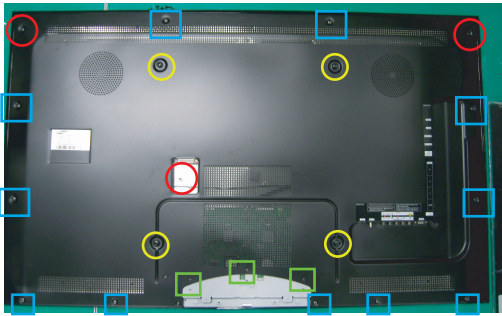
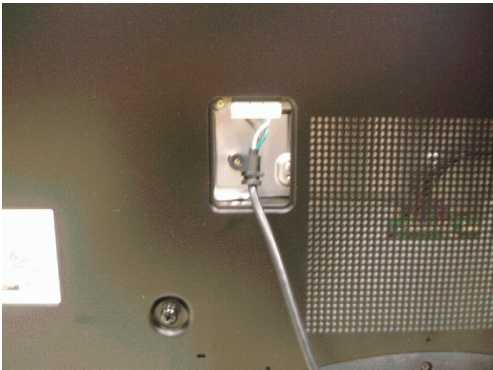
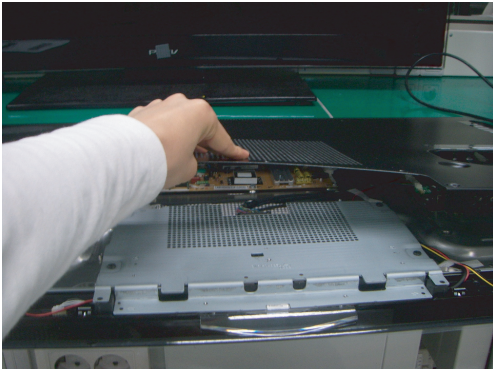
⚠ WARNING: This monitor contains electrostatically sensitive devices. Use caution when handling these components.

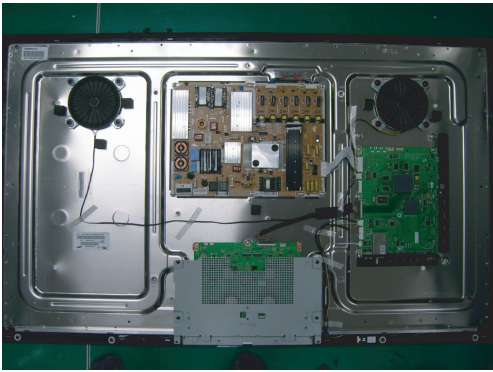
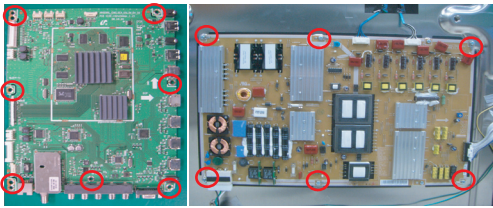
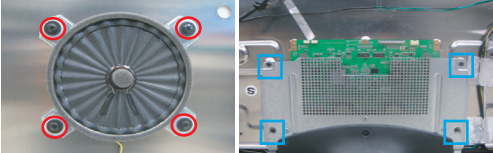
3-1. Disassembly and Reassembly

- ⚠ Cautions:**
- 1. Disconnect the monitor from the power source before disassembly.
 - 2. Follow these directions carefully; never use metal instruments to pry apart the cabinet.

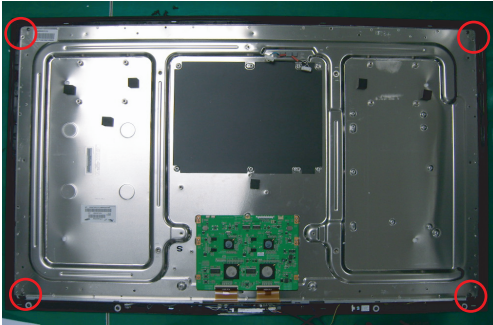
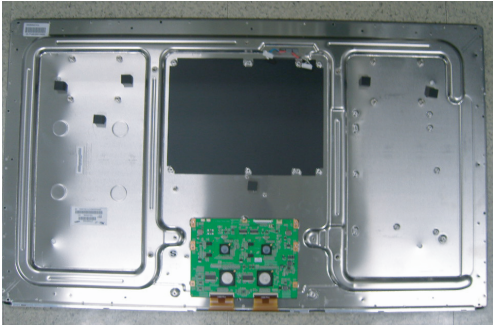
Description	Picture Description	Screws
1. Place monitor face down on cushioned table. Remove screws from the Stand. Remove stand.		
	  	

3. Disassembly and Reassemble

Description	Picture Description	Screws
2. Remove the screws of rear-cover.		   
2-1. Pull out a AC Power Cord		
3. Lift up the rear-cover.		

Description	Picture Description	Screws
4. Remove the cables and screws from SMPS, Main board and Woofer and Bracket stand link.		Woofer x 2
		 
		   

3. Disassembly and Reassemble

Description	Picture Description	Screws
5. Remove the panel bracket screws from the panel.		 
		
		

※ Reassembly procedures are in the reverse order of disassembly procedures.