

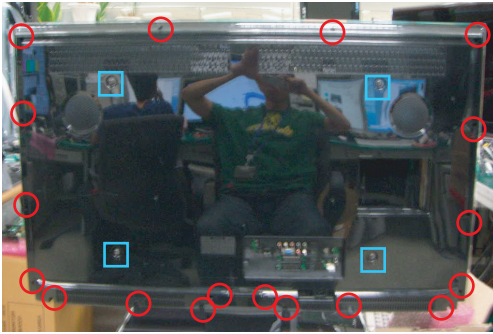
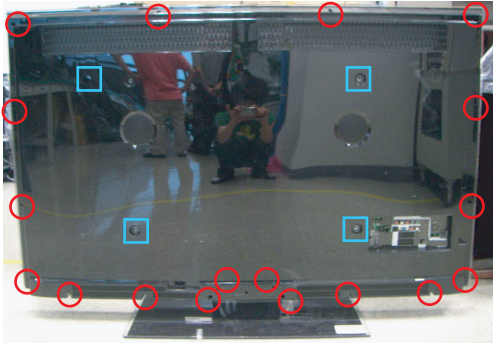
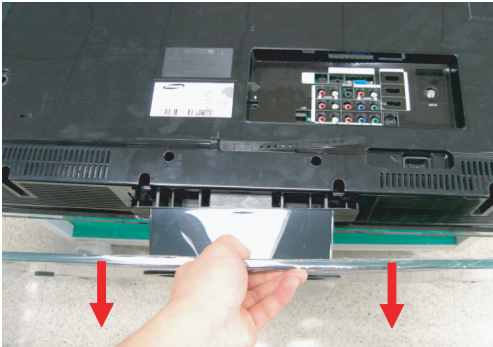
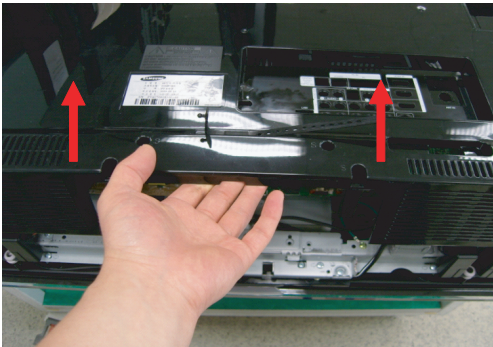
3. Disassembly and Reassembly

This section of the service manual describes the disassembly and reassembly procedures for the LE46A956D LCD TV.

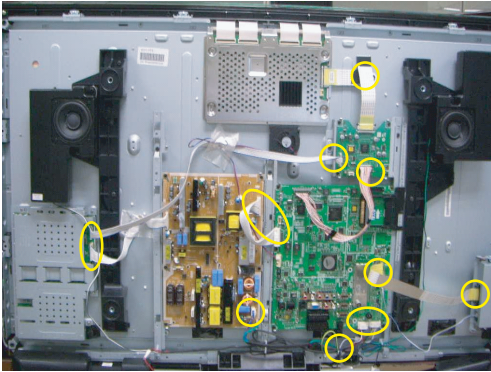
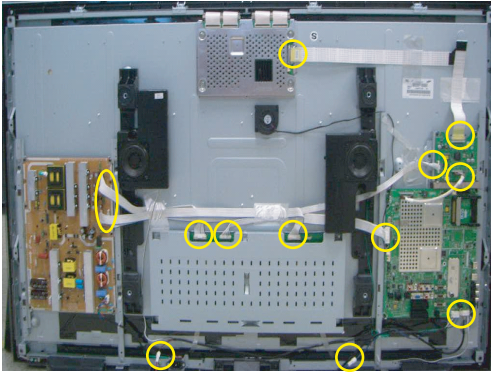
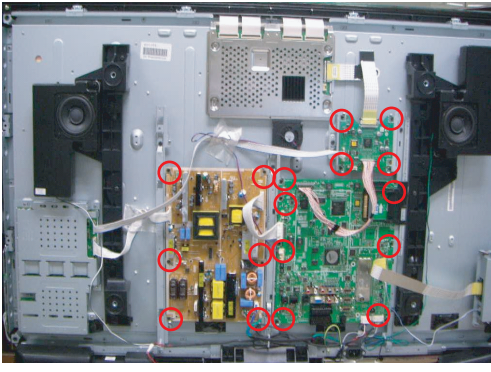
 
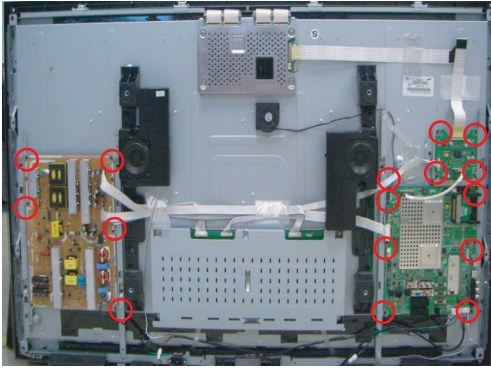
⚠ WARNING: This LCD TV contains electrostatically sensitive devices. Use caution when handling these components.

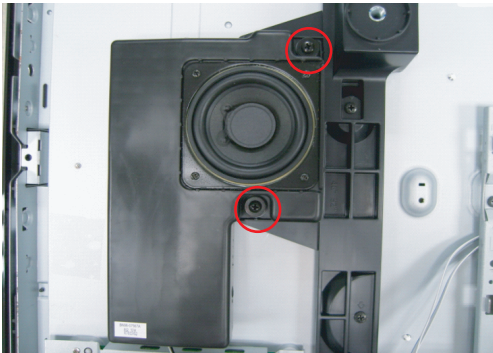
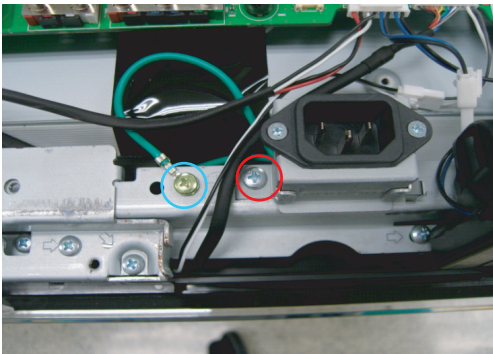
3-1. Disassembly and Reassembly

- ⚠ Cautions:**
1. Disconnect the LCD TV from the power source before disassembly.
 2. Follow these directions carefully; never use metal instruments to pry apart the cabinet.

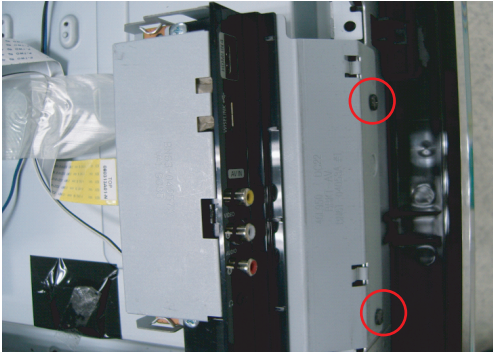
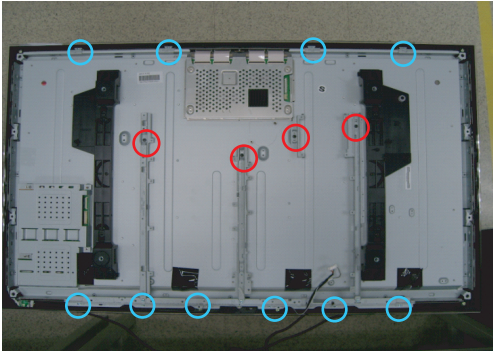
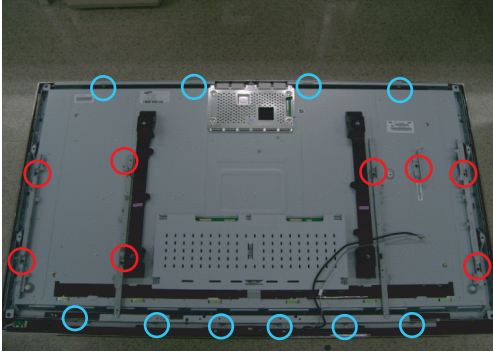
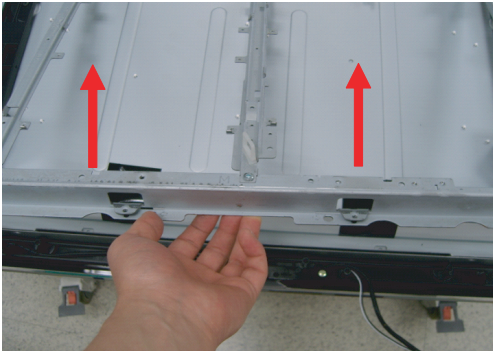
Description	Picture Description	Screws
1. Place the TV face down on cushioned table. Remove screws from the rear cover. Remove stand. Lift up the rear cover.		46"    
		55"    
		46"/55"
		46"/55"

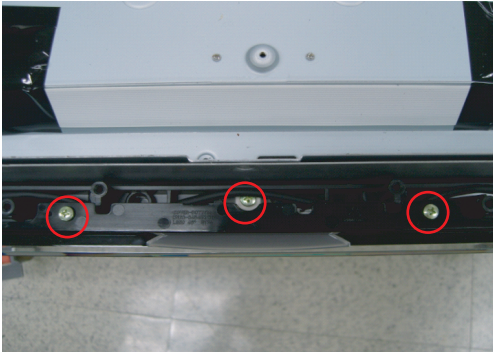
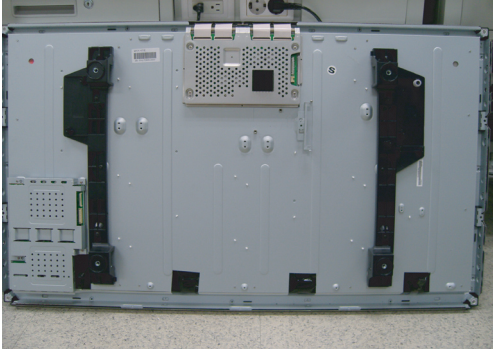
3. Disassembly and Reassembly

Description	Picture Description	Screws
2. Detach all cables. Remove screws of boards. (SMPS, Local Dimming, Mainboard) Remove the boards.		46"
		55"
		46"  
		55"  

Description	Picture Description	Screws
3. Remove screws of stand-bracket. Remove screws of woofers. Remove screws of inlet socket.		46"/55"  
		46"/55"  
		46"/55"    

3. Disassembly and Reassembly

Description	Picture Description	Screws
4. Remove screws of side-AV. (only 46")		46"/55"  
5. Remove screws of panel-bracket. Lift up the panel bracket.		46"    
		55"    
		46"/55"

Description	Picture Description	Screws
6. Remove LED's screws. Lift up the panel.		46"/55"  
		46"/55"
		46"
		55"

※ Reassembly procedures are in the reverse order of disassembly procedures.

Memo