

3. Disassembly and Reassembly

This section of the service manual describes the disassembly and reassembly procedures for the LED TV.

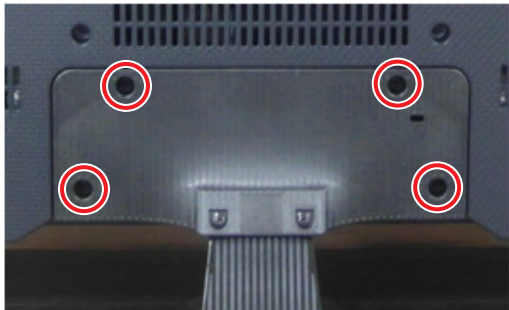
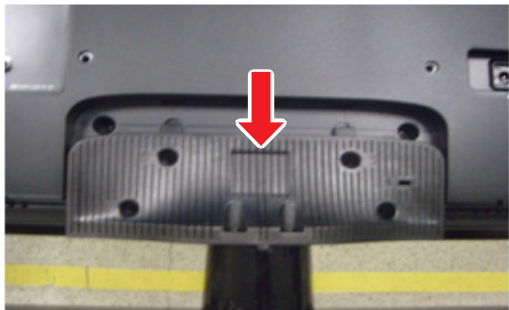


This LED TV contains electrostatically sensitive devices. Use caution when handling these components.

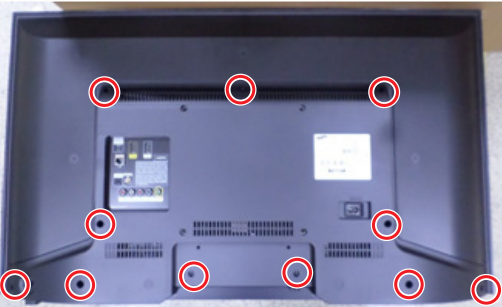
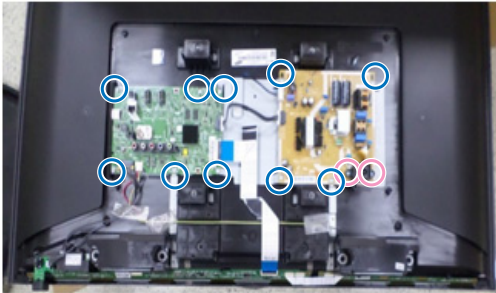
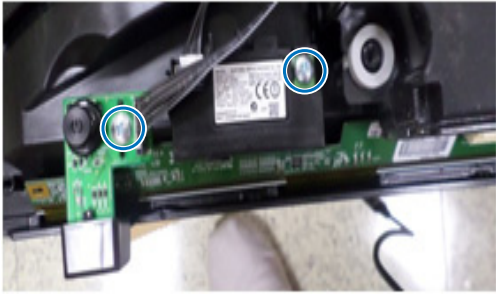
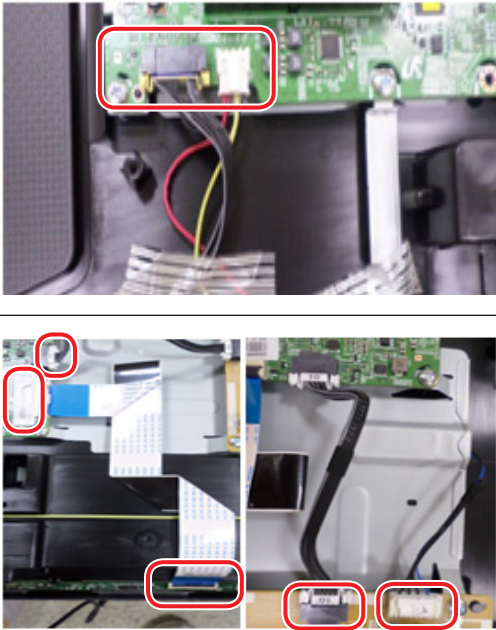
3-1. Disassembly and Reassembly

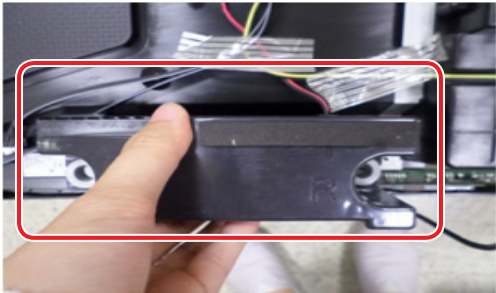


- 1. Disconnect the LED TV from the power source before disassembly.
- 2. Follow these directions carefully; never use metal instruments to pry apart the cabinet.
- 3. If there is no additional coment, it is same for all inches.

Description	Picture Description	Screws
1 Place TV face down on cushioned table.		
2 Remove 4 screws from the stand.	  6003-001782	
3 Remove stand.		

3. Disassembly and Reassemble

Description	Picture Description	Screws
4 Remove screws of Rear Cover.		 6003-001782
5 Disconnect the function assy cable.		 6003-001856  6001-003016
6 Remove the screws of Function module & WiFi.		 6003-001856
7 Remove the speakers and power cables.		

Description	Picture Description	Screws
		
8 Completed disassembly.		



NOTE

Reassembly procedures are in the reverse order of disassembly procedures.